


INSTALLATION INSTRUCTIONS


GE34SBP1—GE3 Four-Sided Backing Plate For GE3 Electric Fireplace Insert

NOT FOR USE WITH GAS MODEL FIREPLACES

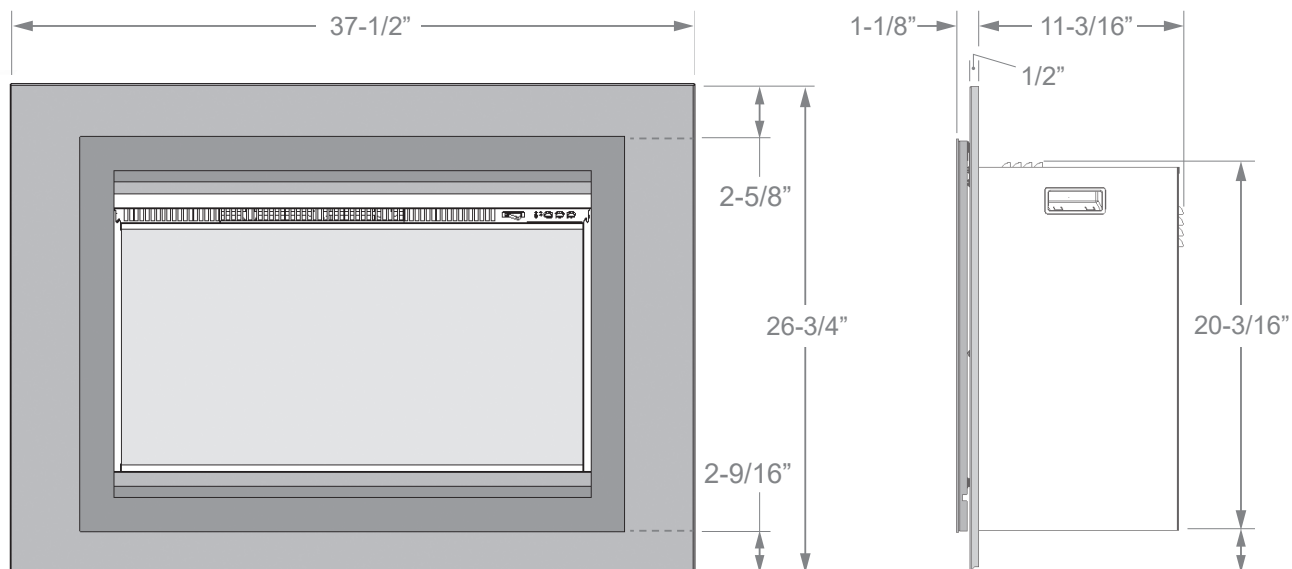


GE34SBP1 4-Sided Backing Plate shown
with GE3ED Edgemont Front

Backing plate ends **below** 2-5/8" **!**
bottom of appliance

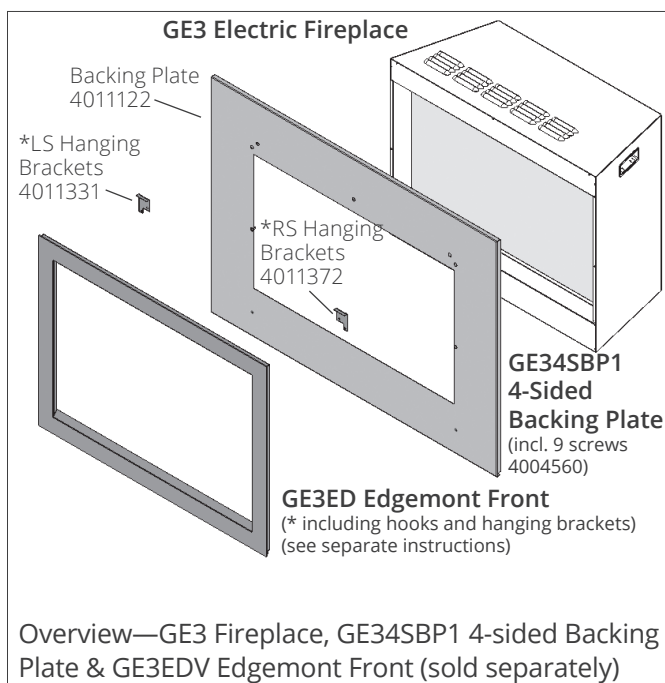

Installation


Hanging brackets supplied loose with GE3EDV Edgemont Front. Secure to the top interior corners of the backing plate with 2 screws each supplied with the backing plate. Matching hook brackets are already installed on GE3ED front.

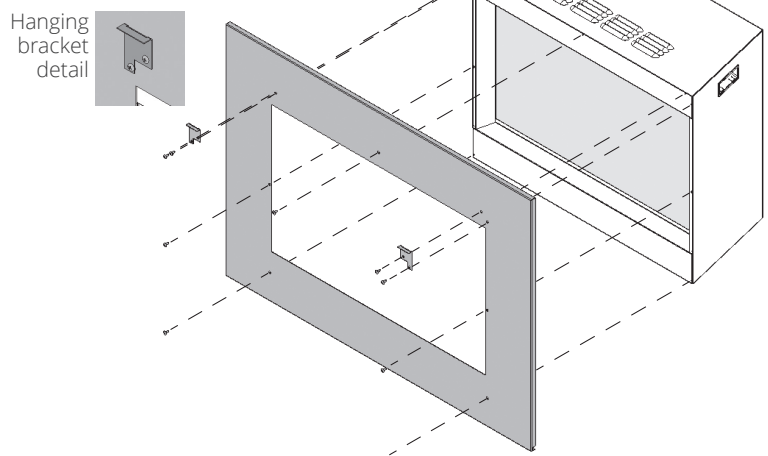


GUIDE D'INSTALLATION

GE34SBP1—GE3 Plaque de finition à 4 côtés pour foyer électrique GE3

NE PAS UTILISER AVEC LES FOYERS À GAZ

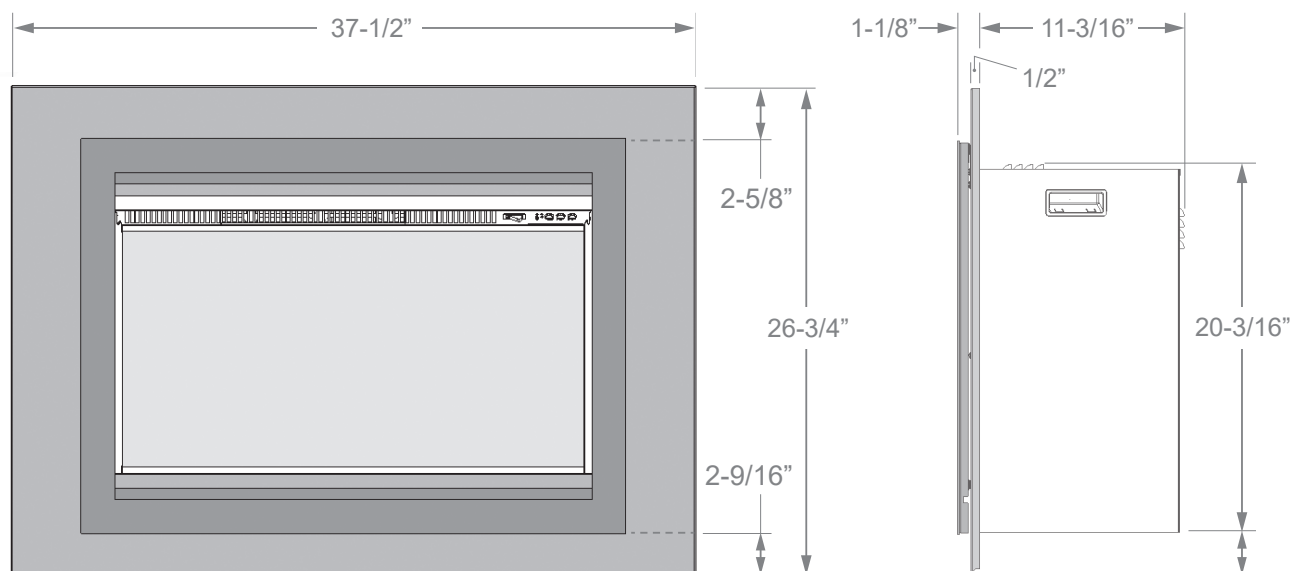

GE34SBP1 Plaque de finition à 4 côtés montrée avec GE3ED Devanture Edgemont

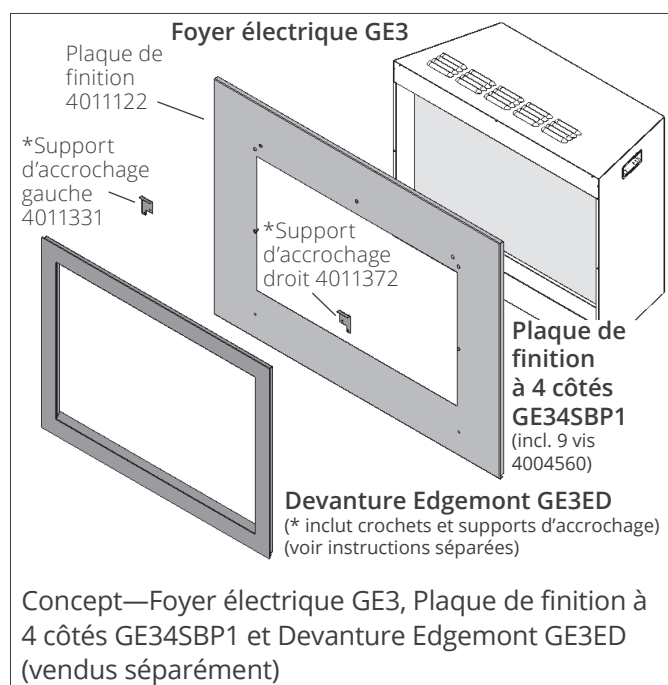

Installation

Supports d'accrochage fournis avec Devanture Edgemont GE3ED. Fixez aux coins intérieurs de la plaque de finition avec deux vis fournies avec la plaque.

Les crochets sont déjà installés sur la devanture GE3ED.

